



## Quick Installation Guide

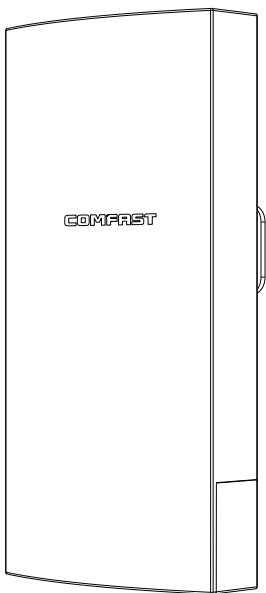


[www.comfast.com.cn](http://www.comfast.com.cn)


## 1 Accessories List

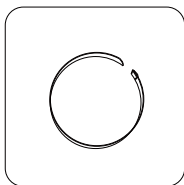

Ties

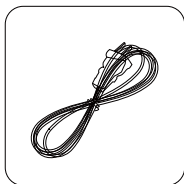


Power Cable

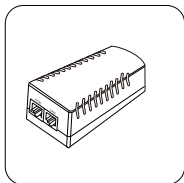


POE Power Adapter

## 2 Interface Description

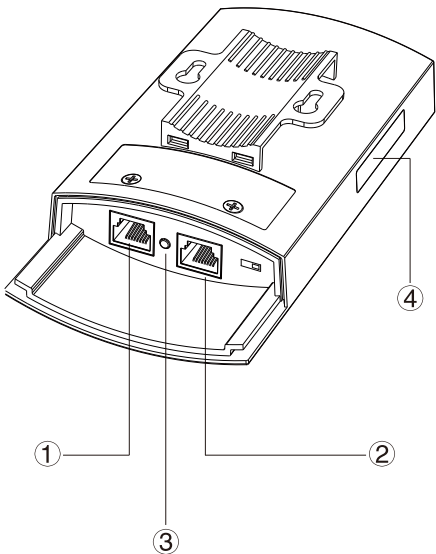

- ① WAN Port: Used for POE power supply and data transmission.
- ② LAN Port: Used for POE power supply and data transmission.
- ③ Reset: Used for rest to factory settings.
- ④ Indicator: Show the status of equipment.



### 3 Schematic Diagram of Typical Connection

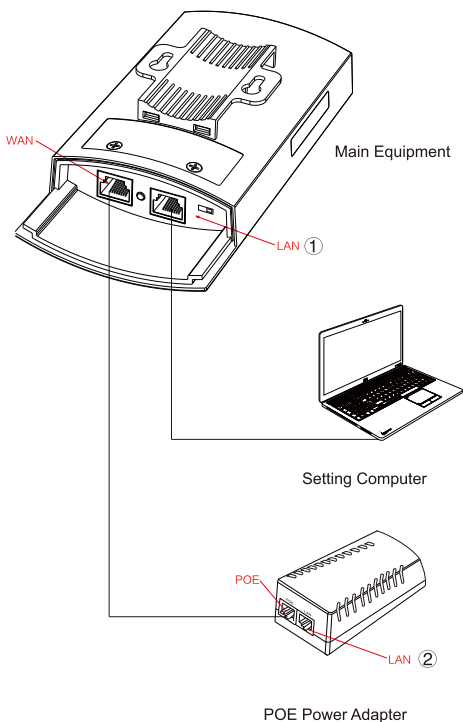

- ① Connect LAN port of the device and the computer to set the device mode.
- ② After mode settings finished, connect LAN port of the POE power adapter to the Internet.


## 4 Installation Guide for Tie

- ① Make the tie A through B and adjust to suitable position according to pole thickness.

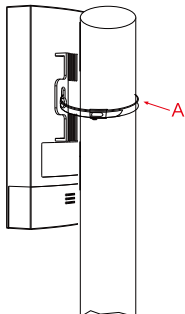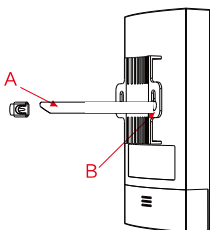


- ② Install the main equipment on the pole and fasten ties A with tensioning .

- ③ Press the buckle E, and remove the cover C of the main equipment, then plug the wire D into the ethernet port, finally fasten the cover C .


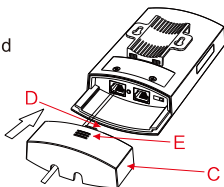


## 5 Installation Guide for Bracket

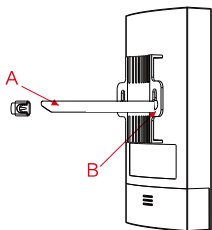


- ① Make the tie A through B and adjust to suitable position according to pole thickness.

- ② Install bracket on the pole, then install the main equipment on the bracket and fasten ties A with pliers tensioning.

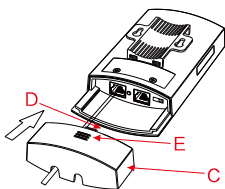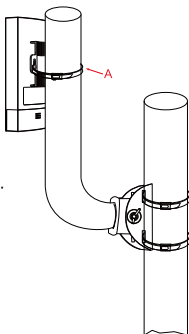



- ③ Press the buckle E, and remove the cover C of the main equipment, then plug the wire D into the ethernet port, finally fasten the cover C.

## 6 Installation Guide for Wall Mount

 

① F and G are nail holes.

 ② Place two nails on the wall and hang up the CPE on the corresponding nails.

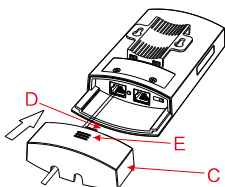

③ Press the buckle E, and remove the cover C of the main equipment, then plug the wire D into the ethernet port, finally fasten the cover C .

## Copyright Information

### Statement

**Shenzhen Four Seas Global Link Network  
Technology CO.,Ltd.Company**  
all rights reserved.

Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic,mechanical,printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

**COMFAST** is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd. Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee.

Hotline: 0755 83790059/83790659

Manufacturer: Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company

Address: 9th Floor, Building H, Huanan Digital Valley,  
No. 1 Huanan Road, Longhua District, Shenzhen,  
China

Website: [www.szcomfast.com](http://www.szcomfast.com)