

# COMFAST

## Quick Installation Guide



### Outdoor Wireless Bridge

## 1 Packing List



Three-Piece Antenna Sets



Shell + Cover



Base



Mounting bracket + Nut



POE Adapter



Stainless Steel Tie




Software Installation Guide



Hardware Installation Guide

## 2 Indicators And Interface

### 2.1 LED Indicator

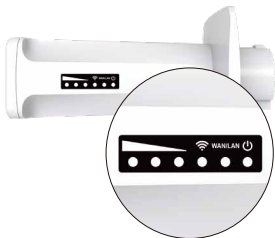

### 2.2 Interface



| LED            | Description                                                                                                                                              |
|----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
|                | Light on: The device is powered on                                                                                                                       |
| <b>WAN/LAN</b> | Light On: Wireless Network Is Available<br>Blinking: Wireless Data Transmission                                                                          |
|                | Light On: Wireless Network Is Connected<br>Blinking: Wireless Data Transmission                                                                          |
|                | Signal strength indicator<br>Light off : -95dbm~-90dBm<br>1 Light on : -90dbm~-80dBm<br>2 Light off : -80dbm~-65dBm<br>3 light on : stronger than -65dBm |


| Number | Description                                                                  |
|--------|------------------------------------------------------------------------------|
| ①      | Ethernet Port                                                                |
| ②      | Reset Button<br>Pleas reset button for 8 seconds to restore factory settings |

## 3 Equipment Installation Steps


### 3.1 Pole mounting




① Connect the three antenna sets

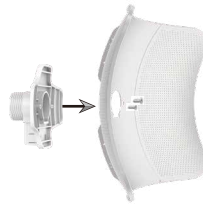


② Insert the base on the antenna and fix it with two screws

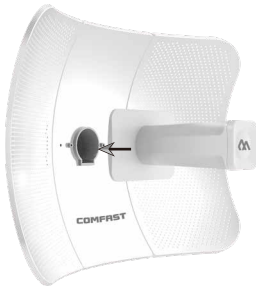


③ Insert the shell + cover into the reflector

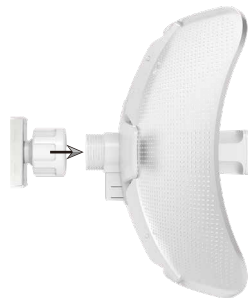

④ Screw the bracket + nut + device clockwise on the base

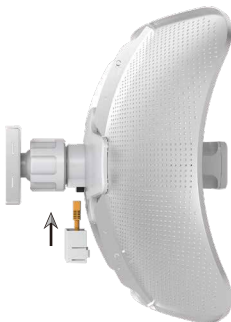

⑤ Pull out the back waterproof cover, insert the network cable into the port, and push back the cover

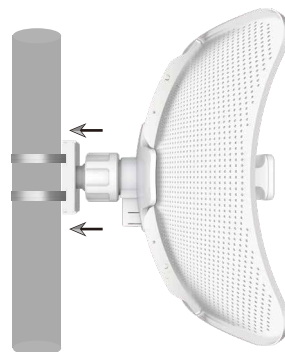


⑥ Insert the stainless steel tie through the 4 slots on the bracket and fix the device onto the pole



⑦ Loosen the base and tighten it after alignment

## 4 Power Supply

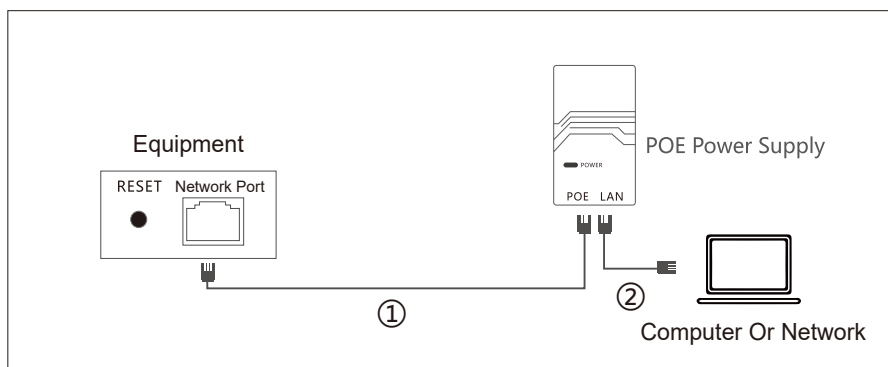

4.1 One end of the network cable is connected to the POE port of the original POE module, the other end is connected to the device network port, and then another network cable is used to connect to the computer or network

### ⚠ Note

Any device damage due to using other PoE adapters not provided by Comfast will not be covered under warranty policy

## 5 Network Configuration

5.1 Make sure all the cables are connected correctly

5.2 For more setting details, please refer to the "Software Installation Guide" or visit COMFAST official website <http://www.comfast.cn/>