



Quick installation Guide

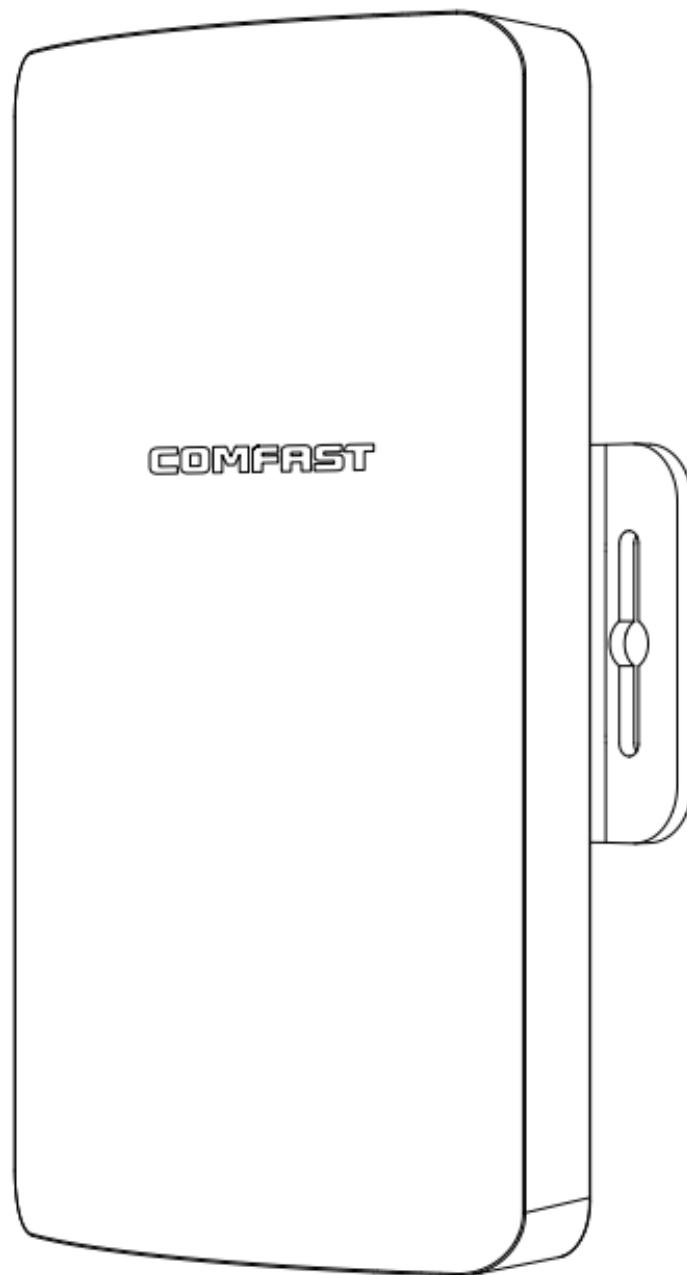


www.comfast.com.cn

M0304335 Version 3.0


1 Accessories ist

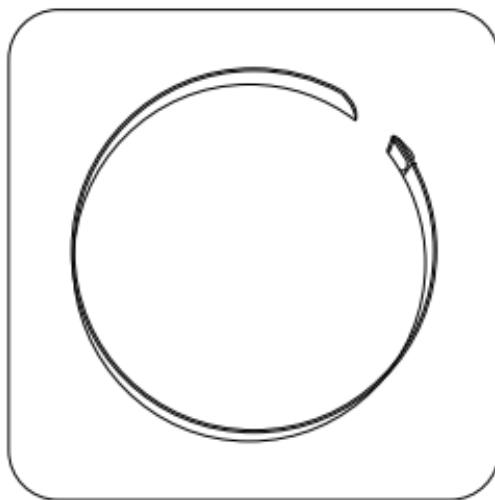

Ties

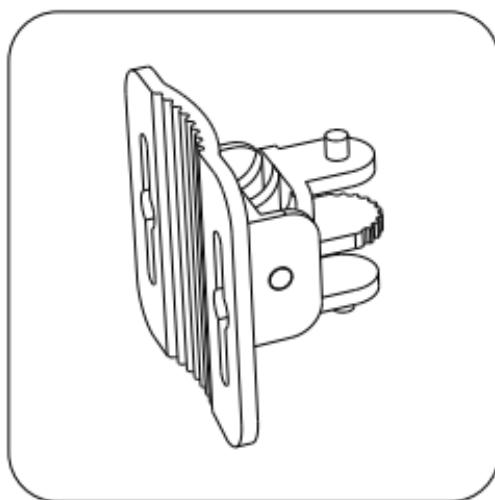


Rotation Holder

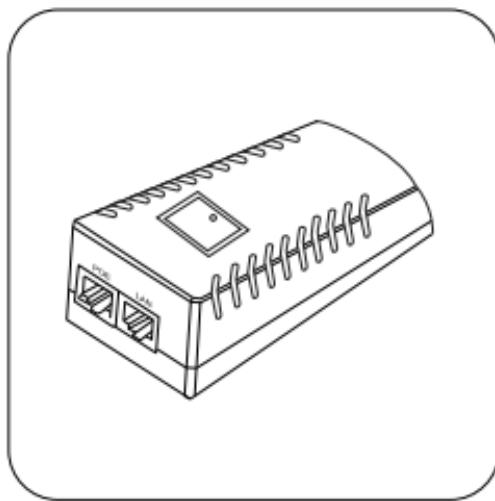


PoE Power Adapter

2 Interface Description

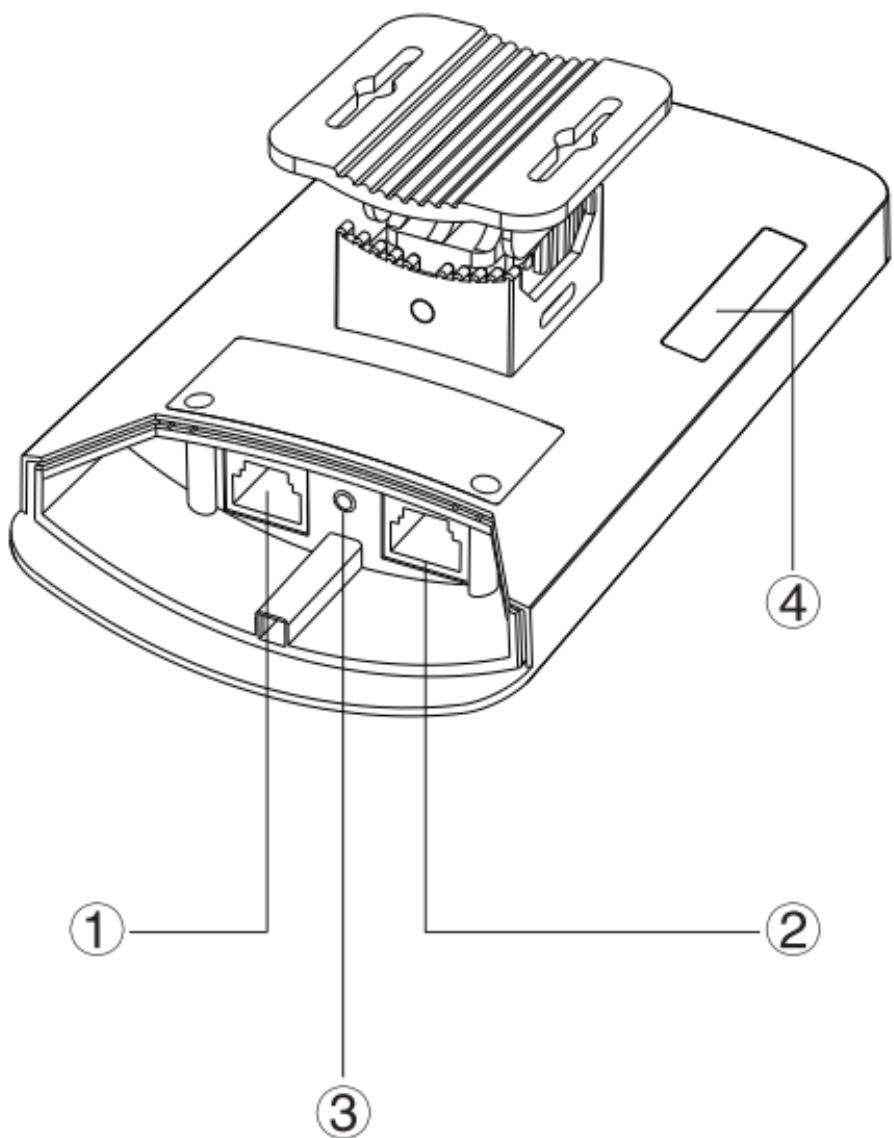

- ① WAN Port: Used for POE power supply and data transmission;
- ② LAN Port: Used for POE power supply and data transmission;
- ③ Reset: Used for reset to factory settings;
- ④ Indicator: Show the status of equipment;



3 Schematic Diagram of Typical Connection

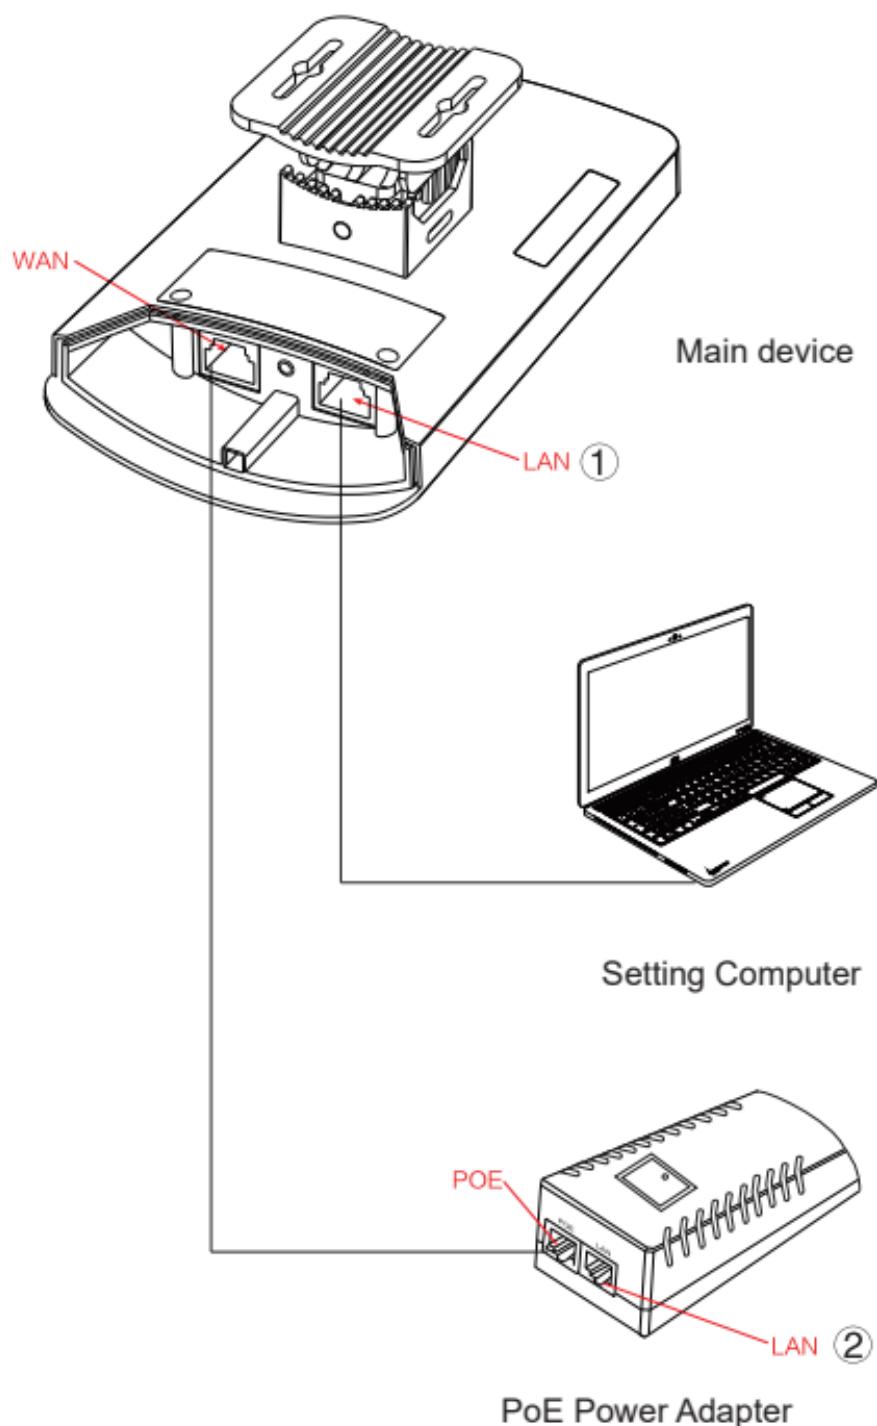

- ① Connect LAN port of the device and the computer to set the device mode.
- ② After mode settings finished, connect LAN port of the PoE power adapter to the Internet.


4 Installation Guide for Tie

① Make the tie A through B and adjust to suitable position according to pole thickness;

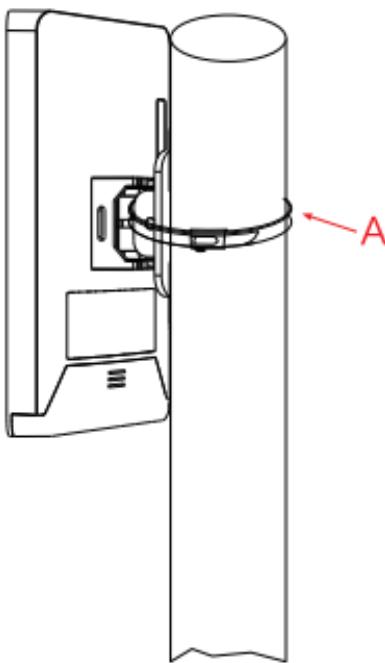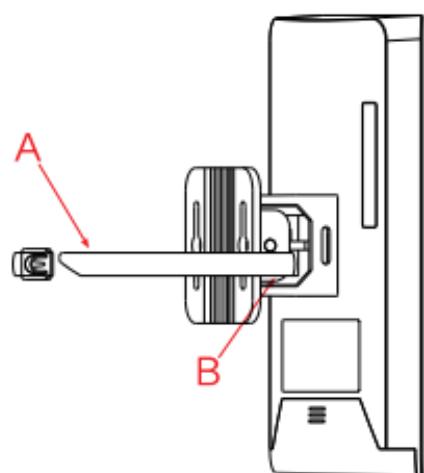


② Install the main device on the pole and fasten ties A with pliers;

③ Press the buckle E, and remove the cover C of the main device, then plug the wire D into the device port, finally fasten the cover C;


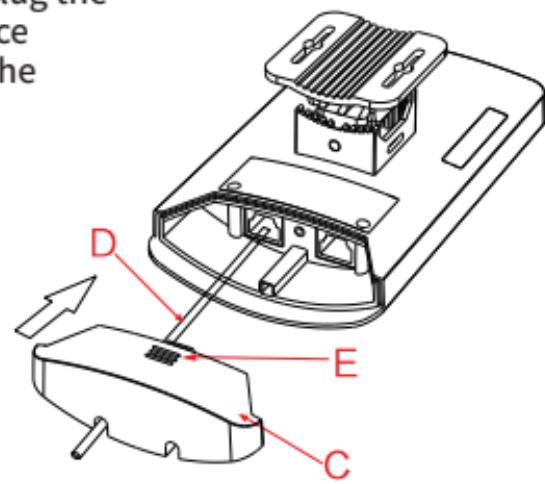


5 Installation Guide for Bracket

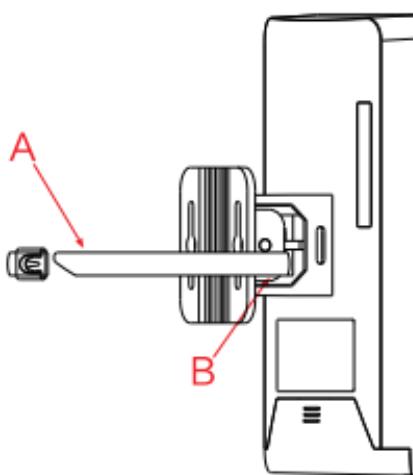


① Make the tie A through B and adjust to suitable position according to pole thickness;

② Install bracket on the pole, then install the main device on the bracket and fasten ties A with pliers.

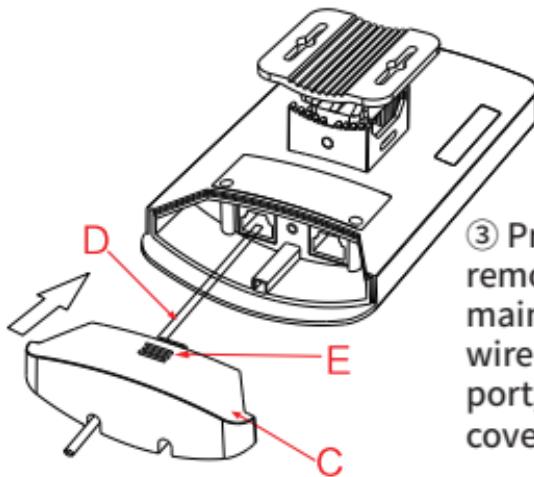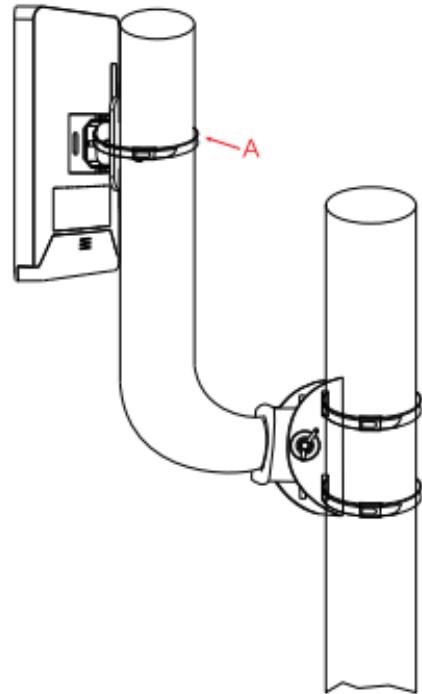



③ Press the buckle E, and remove the cover C of the main device, then plug the wire D into the device port, finally fasten the cover C;

6 Installation Guide for Wall Mount

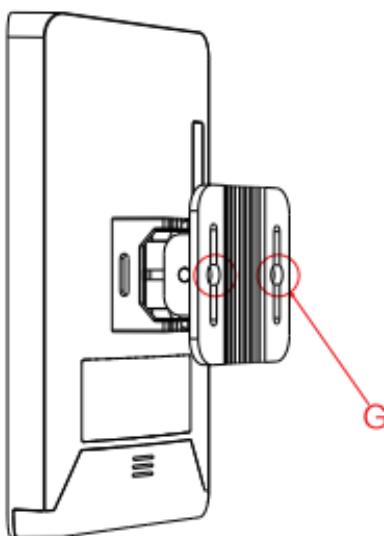

① F and G are nail holes;

② Place two nails on the wall and hang up the CPE on the corresponding nails.

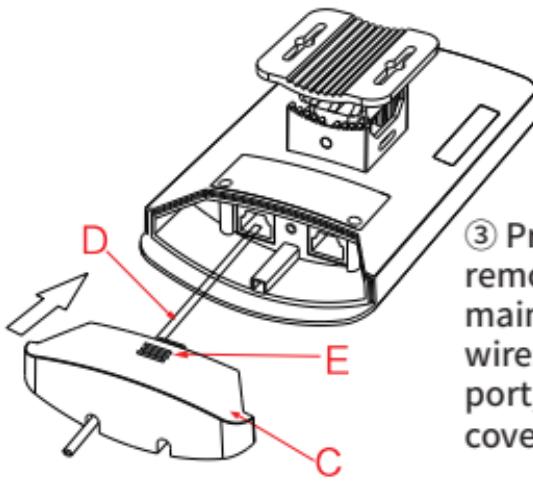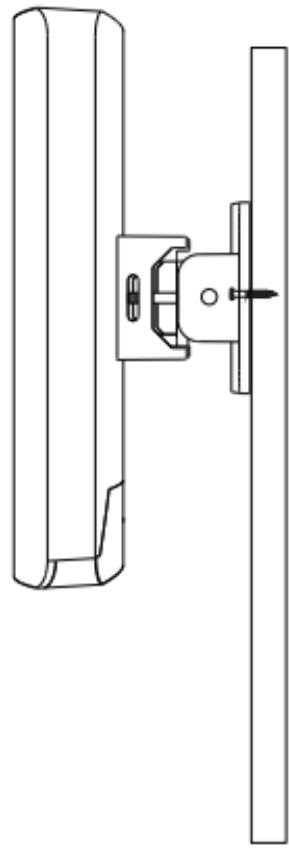

③ Press the buckle E, and remove the cover C of the main device, then plug the wire D into the device port, finally fasten the cover C;

Copyright information

Statement

Shenzhen Four Seas Global Link Network Technology CO.,Ltd. Company all rights reserved.

Without ours official written permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means (electronic, mechanical, printing, recording or other possible means) or for the propagation of goods any commercial, profitable purposes.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd. Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee.

Manufacturer: Shenzhen Four Seas Global Link Network Technology Co.,Ltd.

Address: 9th Floor, Building H, Huanan Digital Valley, No. 1 Huanan Road, Longhua District, Shenzhen, China

Hotline: 0755 83790059 / 83790659

Website: www.szcomfast.com