


Quick Installation Guide




www.comfast.com.cn
M0304245 Version 5.0

1 Packing List

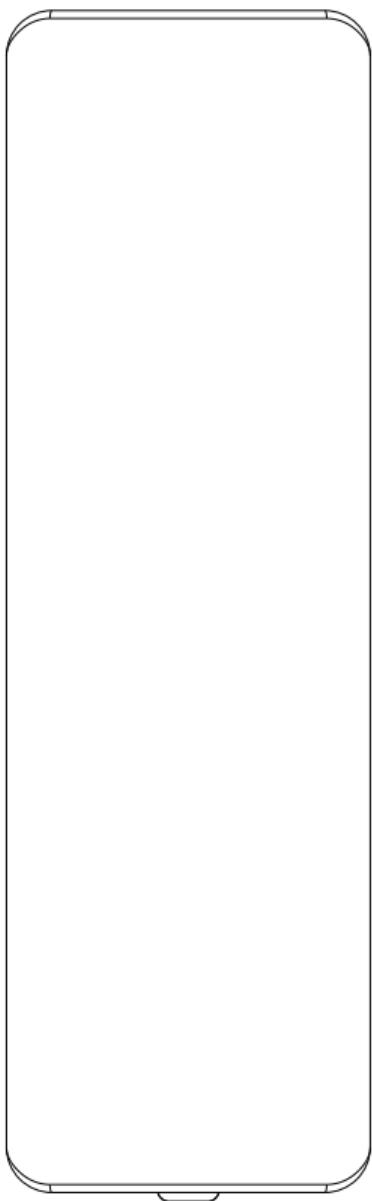

The Main Device

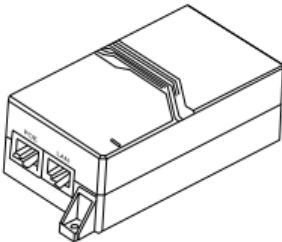


PoE Power Adapter




Ribbon

2 Optional Accessories

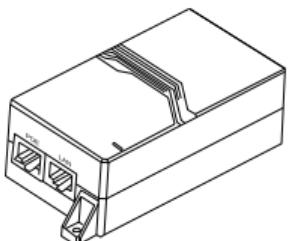


PoE Power Adapter

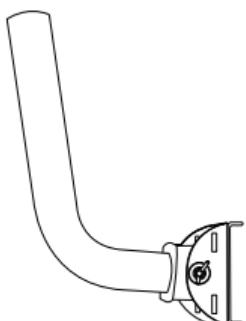

Multi Angle Metal bracket


3 Interface Description

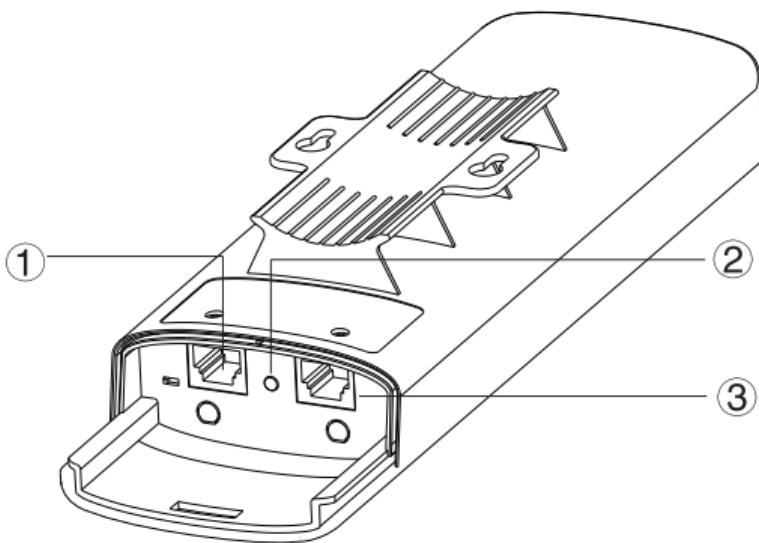


- ① LAN Port: PoE power supply and data transmission;
- ② Reset: Restore to the factory settings;
- ③ WAN Port: PoE power supply and data transmission;

4 Schematic Diagram Of Typical Connection


The Main Device

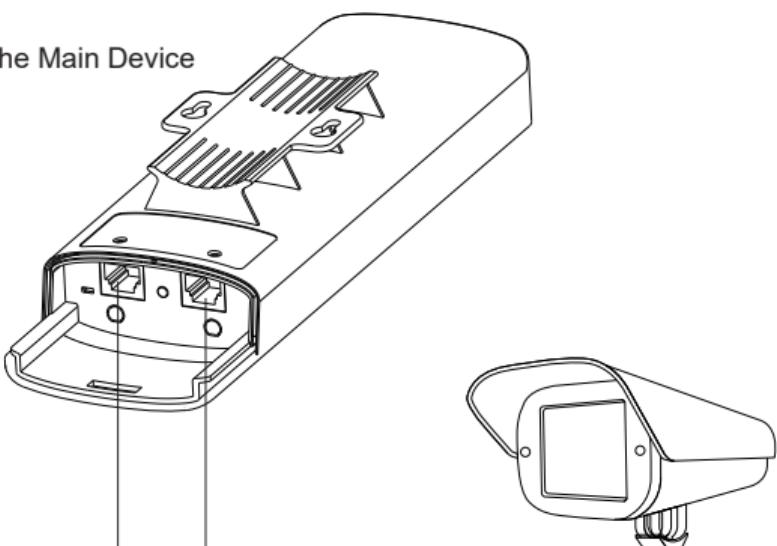

Security/IP camera


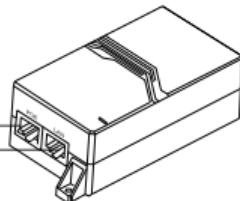


PoE Power Adapter

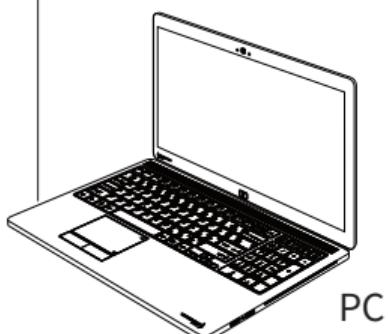


5 Installation Guide for Tie

① Insert two cable ties (A) into the two holes (B) as shown in the picture. The tightness can be adjusted to fit poles of different thicknesses;

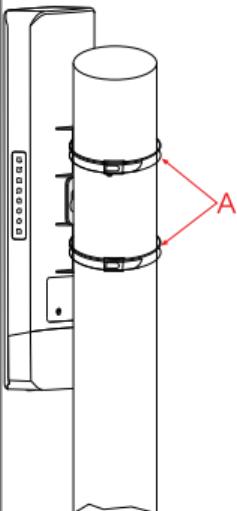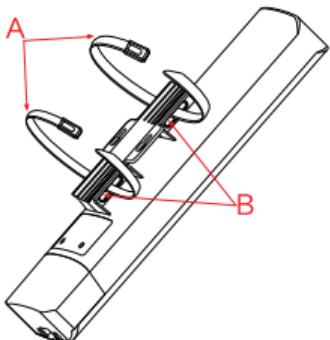


② Install the main device onto the pole and then fasten the cable ties (A) with pliers;

③ Press the fastener (E) and remove the cover (C). Then, insert the cable (D) into the RJ45 port and reattach the cover to complete the installation;


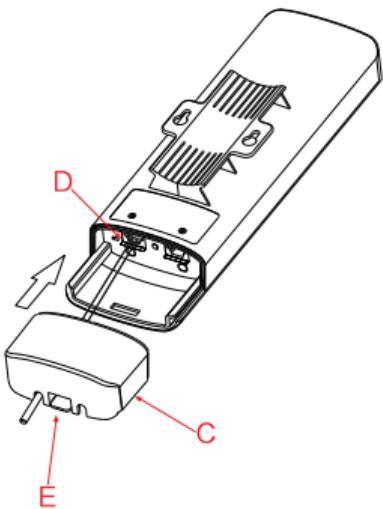


6 Installation Guide for Mount Bracket

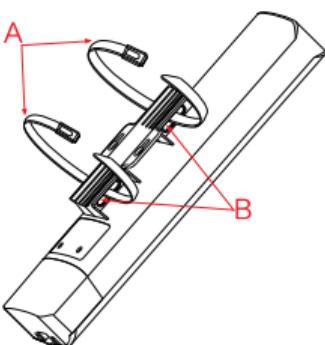


① Insert two cable ties (A) into the two holes (B) as shown in the picture. The tightness can be adjusted to fit poles of different thicknesses;

② First, install the metal bracket (A) onto the pole. Then, install the main device onto the pole of the bracket, and secure it by tightening the two cable ties (A) with pliers;

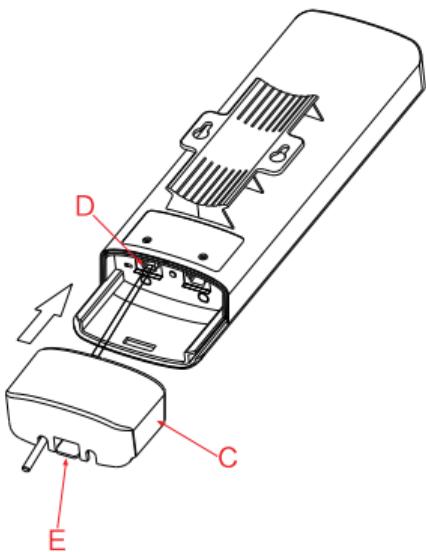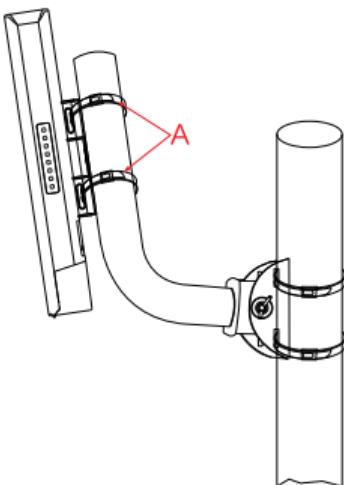



③ Press the fastener (E) and remove the cover (C). Then, insert the cable (D) into the RJ45 port and reattach the cover to complete the installation;

7 Installation Guide for Nail Mount

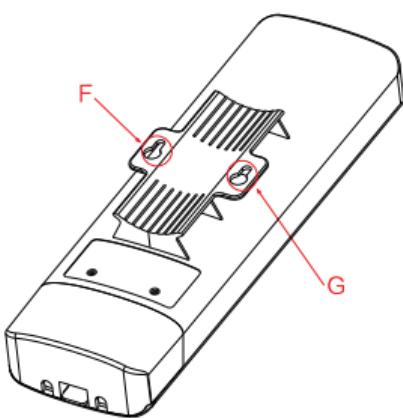

① F and G are the nail hole position;

② Fix the main device by two nails properly.

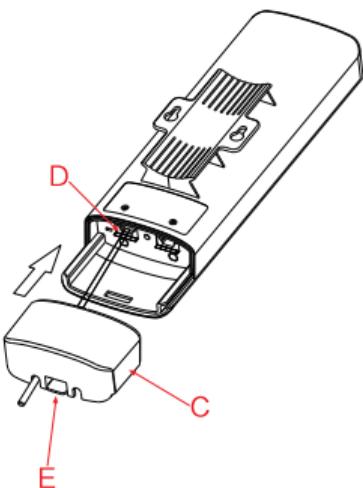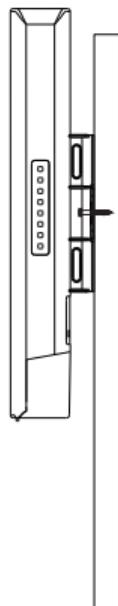

③ Press the fastener (E) and remove the cover (C). Then, insert the cable (D) into the RJ45 port and reattach the cover to complete the installation;

Copyright information

Statement

Shenzhen Four Seas Global Link Network Technology CO.,Ltd. Company all rights reserved.

Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic, mechanical, printing, recording or other possible means) or for the propagation of goods any commercial, profitable purposes.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd. Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee.

Manufacturer: Shenzhen Four Seas Global Link Network Technology Co.,Ltd.
Address: 9th Floor, Building H, Huanan Digital Valley, No. 1 Huanan Road, Longhua District, Shenzhen, China
Hotline: 0755 83790059 / 83790659
Website: www.szcomfast.com